


1




UNDO 10 SCREWS IN ORDER TO REMOVE RAMP AND FRONT LID.

2

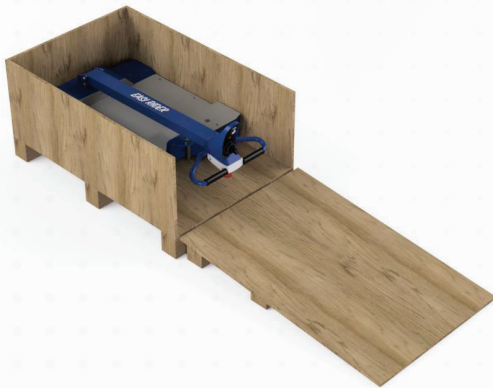

PLACE RAMP IN FRONT OF CRATE.


3

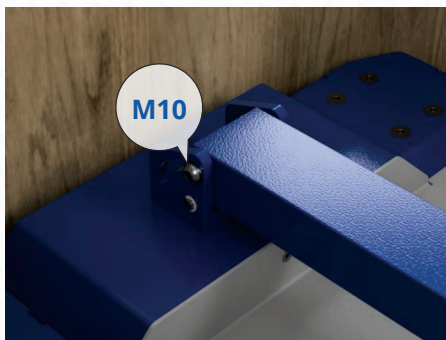

ENSURE THE M10 BOLTS (2) AT THE BOTTOM OF THE HANDLE COLUMN ARE LOOSE.

# UNBOXING

4

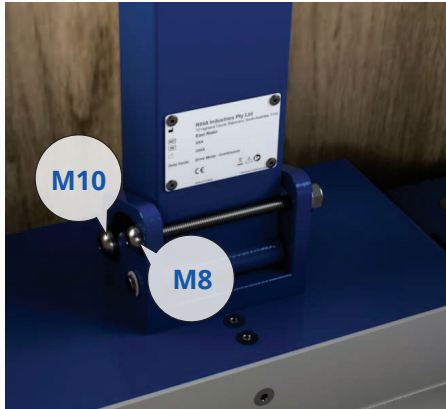

**FASTEN BOTH M10 BOLTS, INSERT M8 HANDLE RETAINING BOLT AND FASTEN.**

- ENSURE THAT M10 BOLTS ARE TIGHTENED EVENLY ON BOTH SIDES.
- ENSURE M8 HANDLE RETAINING BOLT IS THREADED THROUGH RUBBER SLEEVE AND IS TIGHT ENOUGH TO AVOID ANY PLAY IN THE HANDLE.

5



**DISENGAGE EMERGENCY STOP, TURN MACHINE ON AND SLOWLY REVERSE MACHINE OUT OF CRATE.**

6



**SCAN QR CODE AND DOWNLOAD OPERATOR MANUAL.**

ALTERNATIVELY, VISIT  
[WWW.RIHAINDUSTRIES.COM/EASI-RIDER](http://WWW.RIHAINDUSTRIES.COM/EASI-RIDER)